



[Portal](#) > [FAQs](#) > [All Other Radios](#) > [CD Playback](#) > [Audio CDs skipping or jumping](#)

Audio CDs skipping or jumping

Pure Support - UK - 2019-05-20 - in [CD Playback](#)

Audio CDs skipping or jumping

Try running a CD lens cleaner through your system as CD audio skipping or jumping is often due to dust or dirt build up on the lens. This often happens to CD mechanisms through normal use and can be resolved quickly.

CD lens cleaners are available from most high street electrical retailers.