



[Portal](#) > [FAQs](#) > [Wireless Music Systems](#) > [My Jongs LED is changing between amber, green and red](#)

---

## My Jongs LED is changing between amber, green and red

Pure Support - UK - 2019-05-20 - in [Wireless Music Systems](#)

### **My Jongs LED is changing between amber, green and red**

This is your Jongo updating its software. Do not power off your Jongo while this is happening. This process may take up to 5 minutes to complete. When the LED is a constant green the update is complete and you can continue using your Jongo.