



Portal > FAQs > Internet Radios and Pure Connect / The Lounge > Binding your Pure remote control - Evoke Flow, Avanti Flow and Sensia only

Binding your Pure remote control - Evoke Flow, Avanti Flow and Sensia only

Pure Support - UK - 2014-06-18 - in Internet Radios and Pure Connect / The Lounge

Evoke Flow and Avanti Flow

On your Flow system press '**Options**' > '**Additional Settings**' > '**Bind Remote**'

Follow the onscreen instructions asking you to press the '**Repeat**' and '**Shuffle**' buttons at the same time

Press 'Select' to confirm the bind when prompted. Your remote is now connected

If your Reach F10 remote only appears to work at very close proximity or doesn't bind at all, please follow the instructions below.

Note you will need a device with a pointed tip - like a pen or pencil to complete this operation

On your Flow system press '**Options**' > '**Additional Settings**' > '**Bind Remote**'

Open the battery compartment on the back of your remote control.

When prompted to press the '**Repeat**' and '**Shuffle**' buttons, use a pen or pencil to press the hardware button inside the battery compartment instead (pictured below). Your remote is now connected.



Binding the remote on your PURE Sensia radio

On your Sensia system press '**Settings**' > '**Remote**'

Follow the onscreen instructions asking you to press the '**Fast Forward**' and '**Rewind**' buttons at the same time

Press '**Play\ Pause**' button to confirm the bind when prompted. Your remote is now connected.