



[Portal](#) > [FAQs](#) > [Internet Radios and Pure Connect / The Lounge](#) > [Changes to Sensia display behaviour after update version 4.0](#)

Changes to Sensia display behaviour after update version 4.0

Pure Support - UK - 2019-02-23 - in [Internet Radios and Pure Connect / The Lounge](#)

Changes to Sensia display behaviour after update version 4.0

When update version 4.0 has changed the switch off behaviour of the Sensia radio. You now have 3 options to choose from on screen, '**Low Power Standby**', '**Clock**' and '**Cancel**'.

Choosing '**Low Power Standby**' will turn the display off regardless of what the display settings are set to in the radio menus.

Choosing '**Clock**' will make the radio adhere to the display settings set in the radio menu, so the display could stay on or switch off after 7 seconds depending on how you have your display settings set.

Choosing '**Cancel**' will return you to the radio controls.

If you have no clock display when entering standby you must ensure they are using the '**Clock**' standby option (and not Low Power Standby) and have the radio display settings set appropriately to show the clock.

You will also note that the switching off behaviour of the radio using the remote control will depend on how the radio was last switched off manually. E.g if you last switched the radio in to '**Low Power Standby**' using the onscreen options, the remote will always put the radio in to the same standby state. Likewise if you last manually chose '**Clock**' then the remote will switch the radio off in to clock mode.