



[Portal](#) > [FAQs](#) > [All Other Radios](#) > [DAB Specific](#) > [Evoke C-D6/ CD4 instructions to set Treble, Bass and Loudness](#)

Evoke C-D6/ CD4 instructions to set Treble, Bass and Loudness

Pure Support - UK - 2020-11-29 - in DAB Specific

First, make sure your unit is switched on and playing

Next press the Menu button and scroll using the Select Dial or use the left and right navigation buttons on the remote control.

You will come across "**Set EQ**" please now press the Select dial in briefly or use the **<Select>** button on the remote control to enter into the EQ settings.

Scroll using the Select dial or navigation buttons and select "**Custom**".

You will now be able to scroll through, and select from "**Loudness**" "**Treble**" and "**Bass**"

From here, choose the option you wish to Customise by using the Select dial or Button on your remote.