



Portal > FAQs > All Other Radios > DAB Specific > How do I set an alarm on a Pop Midi, Mini and Maxi?

---

## How do I set an alarm on a Pop Midi, Mini and Maxi?

Pure Support - UK - 2015-02-18 - in DAB Specific

Please make sure your radio is switched on.

Tap the menu button **alarm** will appear on the screen tap **select**

Select either Alarm 1 or 2 by pressing **< or >** and then **select**.

Now press **< or >** until **ON** is displayed on screen and press **select**

Now set the time you would like the alarm to sound at by pressing **< or >** to change the hours press **select** to confirm. Now do the same to select the minutes. Press **select** to confirm

Now set the duration (This is how long the alarm will sound for) press **< or >** to select 15-90 minutes then press **select**

Now set the source press **< or >** to select Digital, FM or Tone and then press **select**

Now select how often you would like the alarm to sound by pressing **< or >** and then press **select**

Finally you can set the volume you would like the alarm to sound at press **< or >** and then select (Note you can't change the volume of a Tone alarm only Digital or FM)

The radio will now report the alarm is **saved**.