

Portal > FAQs > Internet Radios and Pure Connect / The Lounge > How to use Sensia 'Apps'

How to use Sensia 'Apps'

Pure Support - UK - 2015-06-23 - in Internet Radios and Pure Connect / The Lounge

How to use Sensia 'Apps'

Apps are accessed from the top right display panel called the 'Visual Panel'. You can side swipe or scroll this panel to access different features of Sensia – including apps, media player photos etc. To access apps, horizontally side swipe the visual panel until you see an app and then vertically swipe the panel to access different apps.

Please note you may need to power cycle your Sensia radio for the apps to appear correctly. To power cycle, remove all mains power from the radio and wait 20 to 30 seconds. Reconnect the mains power and switch on normally. You should now be able to use apps.

Can the Weather app on the "Visual Panel" of your Sensias, touch the Play symbol in the center of the screen. After you touch the screen in the middle, so that a small gear will appear at the bottom left and touch this now.

You are now in the "Settings". To search for a new location, touch the small button with the magnifying glass at the bottom right.

Now open the "Find Location" field - By default our headquarters in Kings Langley, UK is set. Touch the small keyboard icon in this field and enter using the keyboard that appears to your desired location, here the correct upper and lower case does not matter. Did you enter the place, let the keyboard "disappear" (green keypad touch). Now the input of location you have (if exists in the database) appear in the settings (Settings). Go now by touching the X button back, the weather in the city you want "Visual Panel" appears it last

You must have at least v1.5 software installed on your Sensia for apps support. You can check your Sensia software version by tapping Settings > Update.